

Model Number: 9680850

Product Code: 22010

Operating Instructions



AFTER SALES SUPPORT



GB 00800 6343 7000

IRE 00800 6343 7000

 www.bresser.de

MODEL: 9680850 PRODUCT CODE: 22010 11/2019

3

YEAR WARRANTY



MANUAL DOWNLOAD:




www.bresser.de/download/9680850



SERVICE AND WARRANTY:



www.bresser.de/warranty_terms

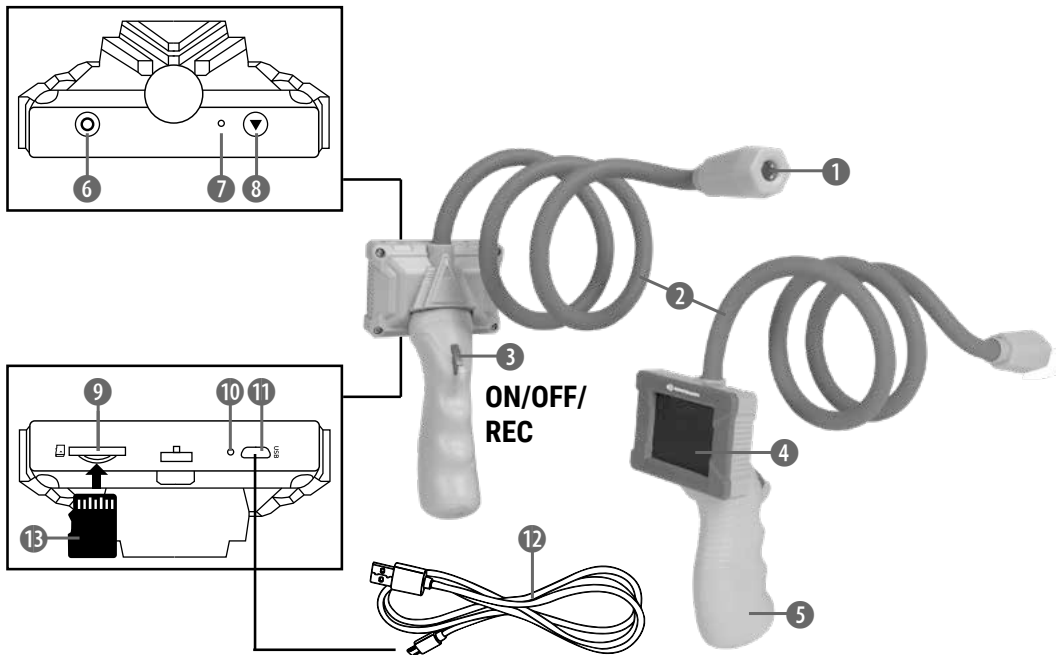

RISK to your child!



Children should only use this device under supervision. Keep packaging materials (plastic bags, rubber bands, etc.) away from children. There is a risk of SUFFOCATION.

This device contains electronic components that operate via a power source. Children should only use the device under adult supervision. Only use the device as described in the manual; otherwise, you run the risk of an electric shock.

RISK of material damage!



Never take the device apart. Please consult your dealer if there are any defects. The dealer will contact our service centre and send the device in for repair if needed.

FIRE-/ DANGER OF EXPLOSION!



Do not expose the device to high temperatures. Excessive heat or improper handling could trigger a short-circuit, a fire or an explosion.

TIPS on cleaning

Before cleaning the device, disconnect it from the power supply (remove USB cable)!

Only use a dry cloth to clean the exterior of the device. To avoid damaging the electronics, do not use any cleaning fluid.

RESPECT privacy!




This device is intended only for private use. Please heed the privacy of other people. Do not use the device to look into apartments, for example.

DISPOSAL




Dispose of the packaging material/s as legally required. Consult the local authority on the matter if necessary.



Do not dispose of electrical equipment in your ordinary refuse. The European guideline 2002/96/EU on  Electronic and Electrical Equipment Waste and relevant laws applying to it require such used equipment to be separately collected and recycled in an environment-friendly manner. Empty batteries and accumulators must be disposed of separately. Information on disposing of all such

equipment made after 01 June 2006 can be obtained from your local authority.

EC Declaration of Conformity

 Bresser GmbH has issued a „Declaration of Conformity“ in accordance with applicable guidelines and corresponding standards. The full text of the EU declaration of conformity is available at the following internet address:
www.bresser.de/download/9680850/CE/9680850_CE.pdf

Scope of delivery

Adventure Scope, USB cable, 4 GB Micro flash card, Instruction Manual

Parts overview

1. Endoscope camera with LED lighting
2. Flexible goose neck (27")
3. ON/OFF/OK: On/Off Power button and OK button (recording)
4. LCD viewing screen (2.3")
5. Handle
6. MODE/MENU button (Video>Photo>Playback>Settings)
7. Reset hole (reset device to factory settings)
8. UP button (long press) and DOWN button (short press)
9. Micro flash card* slot
10. Charging indicator
11. USB interface for charging the device
12. USB cable
13. Micro flash card

Inserting Micro flash card

- SDHC Class 10 or higher required
- Capacity up to 32 GB

Note: For best performance, please choose a branded Micro flash card and format it on your computer before use. Unbranded cards are not guaranteed to work flawlessly.

Charging the battery

- A. Simply connect the USB cable to your computer or to a USB power adapter to charge the battery.
- B. The camera can record video while charging
- C. The camera can also be charged when the power is off.

Turning camera on and off

Press and hold the **ON/OFF/OK** button (3) for 2 to 3 seconds to turn the camera on or off.

Mode Switching

Press the **MODE/MENU** button (6) repeatedly to cycle through the camera modes.

Video Mode > Photo Mode > Playback Mode

Record Videos

Switch to video mode and press the **ON/OFF/OK** button (3) to start recording. Press the **ON/OFF/OK** button (3) again to stop recording.

Take photos

Switch to photo mode. The number of photographs taken and the number of remaining photographs are displayed on the screen. Press the **ON/OFF/OK** button (3) to take a picture.

Playback Mode / Delete File

Press the **UP/DOWN** button (8) to select the next video or image. Press the **ON/OFF/OK** button (3) to play the video. Press the **MODE/MENU** button for 2 to 3 seconds to delete the selected image or video. Press the **ON/OFF/OK** button (3) to confirm and then press the **MODE/MENU** button (6) again to exit the menu.

Settings Menu

Press and hold the **MODE/MENU** button (6) for 2 to 3 seconds to open the setup menu. Press the **MODE/MENU** button (6) again to exit the menu.

Navigation

Press the **UP/DOWN** button (8) to scroll down or to the side. Press the **UP/DOWN** button (8) for 2 to 3 seconds to move up. Press the **ON/OFF/OK** button (3) to confirm.

Settings

Resolution: VGA/HD

Image quality: 1MP, 2MP, 3MP

Cyclic Record: Off/3 Min/5 Min

Creates a new video after the selected runtime

Date tag: YES/NO

Saves the current date on the recordings

Time Setting: Set date and time

Auto Power-Off: Off/1 Min/3 Min

Turns the camera off automatically after the selected time.

Language Setting: Select language

Flicker: 50Hz/60hz

Screen savers: Off/3 Min/5 Min/10 Min

Format: Format Micro flash card (Attention: all data on the card will be deleted!)

Reset System: All made settings will be reset.

Version: Displays the current firmware.

Technical data

Display: 2.31" (5.86 cm)

Lens: 140° Wide angle

Video resolution: 1280X720(30FPS), 640X480(30FPS)

Video format: AVI

Picture resolution: 3MP, 2MP, 1MP

Storage: Micro flash card* (up to 32 GB)
(not included) (SDHC Class 10 or higher required)

Power source: 5V / 1A

Battery capacity: 400 mAh




Battery charging time: 2 hours



Bresser UK Ltd.
Unit 1 Starborough Farm
Starborough Road
Marsh Green
Edenbridge, Kent TN8 5RB
United Kingdom

Errors and technical changes reserved.
Manual_9680850_Adventure-Scope_en_BRESSER_v072019a

AFTER SALES SUPPORT

  00800 6343 7000
 00800 6343 7000

 www.bresser.de

MODEL: 9680850 PRODUCT CODE: 22010 11/2019

