



Hygrometer

Hygrometer MA

Art. No. 7007410CM3000 · 7007410GYE000

EN Instruction Manual

Contents

1 Imprint	3
2 Features.....	3
3 About this Instruction Manual	3
4 Parts overview and scope of delivery	4
5 Screen display	5
6 Setting up power supply.....	5
7 Automatic measurement display	5
8 Mould alert	6
9 Humidity alert.....	6
10 Changing the measurement displays.....	6
11 Disposal.....	6
12 EC Declaration of Conformity	6
13 Warranty	7

1 Imprint

Bresser GmbH

Gutenbergstraße 2
46414 Rhede
Germany

<http://www.bresser.de>

For information regarding liability claims or service requests, please refer to chapters "Warranty" and "Service" in this documentation. We ask for your understanding, that any requests or submissions that have been addressed to the manufacturer's address can not be processed.

Errors reserved - technical specifications subject to change.

© 2017 Bresser GmbH

All rights reserved.

It is not allowed to reproduce this documentation or parts of it in any kind (e.g. photocopying, printing, etc) without written a permission of the manufacturer. It is also prohibited to use or transmit this documentation with electronic systems (e.g. image file, website, etc).

The descriptions and brand names of the corresponding firms used in this documentation are generally protected under trademark, brand and/or patent law for Germany, for the European Union and/or other countries.

2 Features

- Mould warning per alarm, ventilation indicator
- Hygrometer and thermometer
- 24-hours history for humidity and temperature
- Information for a healthy and safety indoor climate.
- Inside temperature display (0 to 50 °C)
- Dew point temperature display (0 to 50 °C)
- Humidity display (20% to 95%)
- Temperature format selection (°C/°F)
- Touch control panel

3 About this Instruction Manual



NOTICE

These operating instructions are to be considered a component of the device.

Please read the safety instructions and the operating instructions carefully before use.

Keep these instructions for renewed use at a later date. When the device is sold or given to someone else, the instruction manual must be provided to the new owner/user of the product.

4 Parts overview and scope of delivery

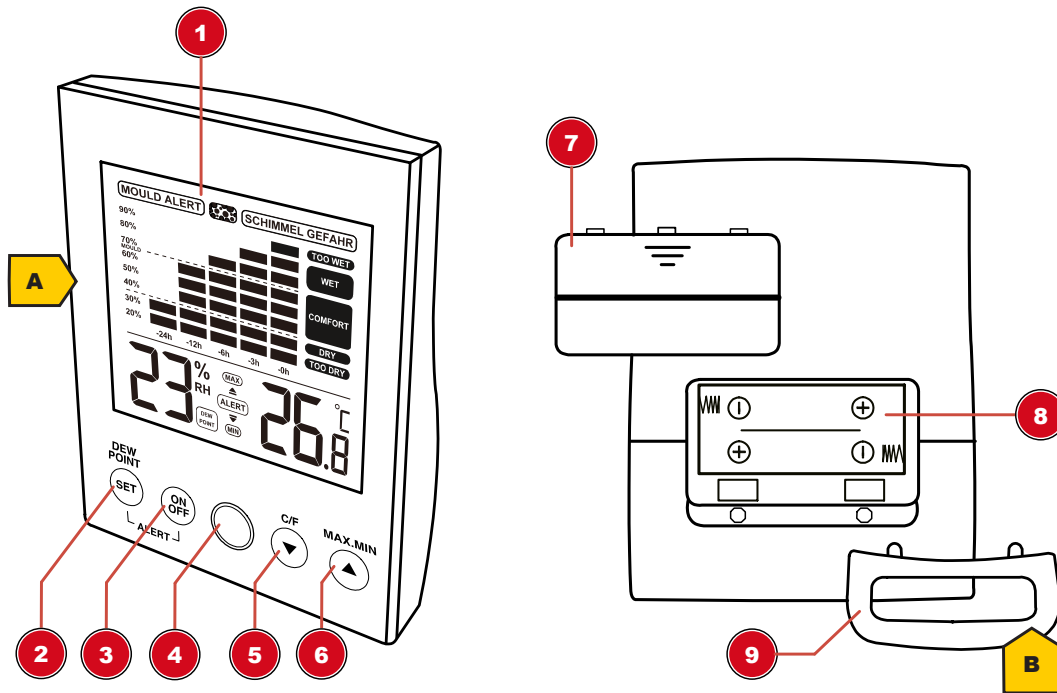


Illustration 1: Hygrometer parts overview

1 Display	2 SET/DEW POINT touch button (change display or alarm setting)
3 ON/OFF touch button (turn on/off the alarm)	4 Light signal when alarm is activated
5 C/F touch button (change between °C and °F, value setting downwards or alarm setting)	6 MAX.MIN touch button (change between maximum and minimum value display or delete all values)
7 Battery compartment cover	8 Battery compartment
9 stand clip (removable)	

Scope of delivery

Thermo/Hygrometer (A), stand clip (B)

Recommended batteries (not included)

2 pcs. Micro batteries (1.5V, AAA type)

5 Screen display

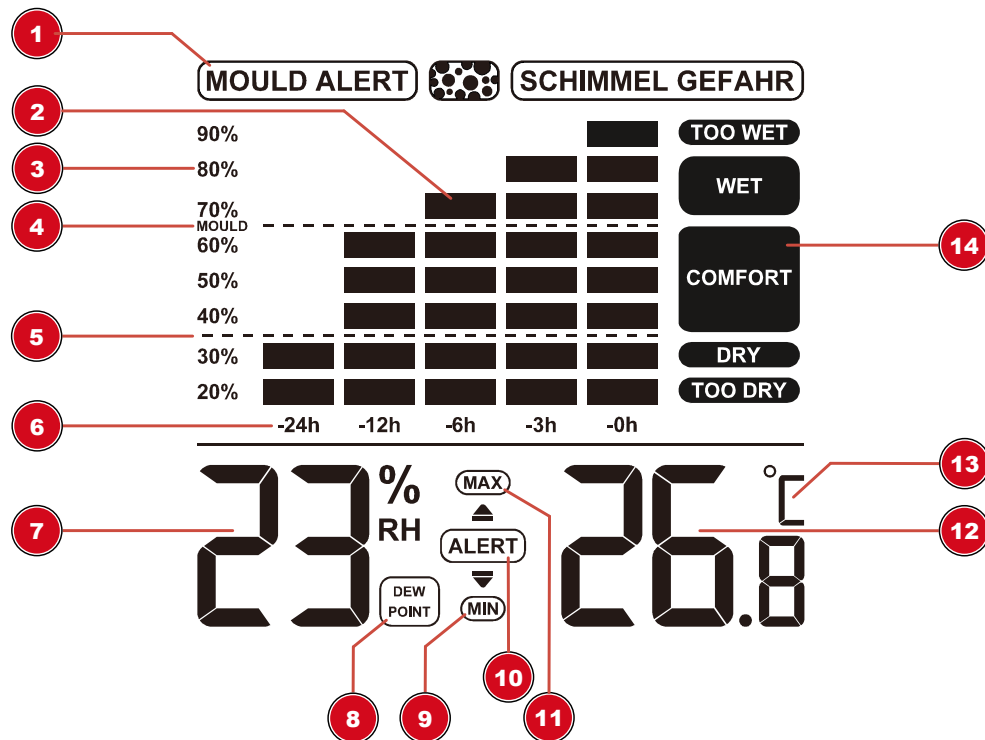


Illustration 2: Hygrometer screen display

1 Mould alert symbol (will be displayed when upper limit value is exceeded)	2 Humidity value bar display
3 Value axis for humidity	4 Upper value limit / borderline
5 Lower value limit / borderline	6 24-hours history for humidity
7 Humidity value (in %) (display mode selectable)	8 Dew point symbol (will be displayed when dew point level is reached)
9 MIN symbol (will be displayed when lowest value is reached)	10 ALERT symbol (will be displayed on alarm setting)
11 MAX symbol (will be displayed when highest value is reached)	12 Temperature value (display mode selectable)
13 Temperature unit (°C or °F selectable)	14 Indoor climate indicator

6 Setting up power supply

1. Remove the stand clip.
2. Remove the battery compartment cover.
3. Insert the batteries into the battery compartment. Ensure that the battery polarity (+/-) is correct.
4. Replace the battery compartment cover.
5. Re-attach the stand clip.

7 Automatic measurement display

Measurements for the indoor area will be displayed on the device once power supply was enabled. Read the detailed manual for more information about readings (see download information on page 2).

8 Mould alert

1. In normal display mode, touch the C/F touch button for approx. 3 seconds to switch to mould alert settings mode. MOULD ALERT and humidity display will flash.
2. Touch the C.F/UP or MAX.MIN/DOWN touch button to set the desired value. Possible values: 60%, 65%, 70% or 75%.
3. Touch C/F touch button again for approx. 3 seconds to save the settings. Mould alert will be triggered if the humidity will reach the set value.
4. MOULD ALERT information will flash until the humidity drops below the set value again.

9 Humidity alert

1. In normal display mode, touch the SET/DEW POINT touch button for approx. 3 seconds to switch to humidity alert settings mode. Humidity upper limit display will flash.
2. Touch C.F/DOWN or MAX.MIN/UP touch button to set the desired value.
3. Touch SET/DEW POINT touch button to switch to humidity lower limit setting.
4. Touch the C.F/UP or MAX.MIN/DOWN touch button to set the desired value.
5. Finally touch the SET/DEW POINT touch button to exit settings mode.
6. Touch the ON/OFF touch button to activate humidity alert. ALERT will be displayed on the screen.
7. Touch the ON/OFF touch button again to disable the humidity alert. ALERT will not be displayed.

10 Changing the measurement displays

- Touch the SET/DEW POINT touch button to switch between current temperature display and dew point temperature display. During dew point temperature display, DEW POINT will be displayed next to the humidity value.
- Touch the C/F touch button to switch between temperature display in °C and °F.
- Touch the MAX.MIN touch button several times to display one after another the maximum, minimum and current temperature and humidity values. MAX, MIN or nothing will be displayed.

11 Disposal



Dispose of the packaging materials properly, according to their type, such as paper or cardboard. Contact your local waste-disposal service or environmental authority for information on the proper disposal.

Do not dispose of electronic devices in the household garbage!

As per Directive 2002/96/EC of the European Parliament on waste electrical and electronic equipment and its adaptation into German law, used electronic devices must be collected separately and recycled in an environmentally friendly manner.

In accordance with the regulations concerning batteries and rechargeable batteries, disposing of them in the normal household waste is explicitly forbidden. Please make sure to dispose of your used batteries as required by law — at a local collection point or in the retail market. Disposal in domestic waste violates the Battery Directive.

Batteries that contain toxins are marked with a sign and a chemical symbol. "Cd" = cadmium, "Hg" = mercury, "Pb" = lead.

12 EC Declaration of Conformity



Bresser GmbH has issued a "Declaration of Conformity" in accordance with applicable guidelines and corresponding standards.

13 Warranty

The regular guarantee period is 2 years and begins on the day of purchase. To benefit from an extended voluntary guarantee period as stated on the gift box, registration on our website is required.

You can consult the full guarantee terms as well as information on extending the guarantee period and details of our services at www.bresser.de/warranty_terms.

Service

DE AT CH BE

Bei Fragen zum Produkt und eventuellen Reklamationen nehmen Sie bitte zunächst mit dem Service-Center Kontakt auf, vorzugsweise per E-Mail.

E-Mail: service@bresser.de
Telefon*: +49 28 72 80 74 210

BRESSER GmbH
Kundenservice
Gutenbergstr. 2
46414 Rhede
Deutschland

*Lokale Rufnummer in Deutschland (Die Höhe der Gebühren je Telefonat ist abhängig vom Tarif Ihres Telefonanbieters); Anrufe aus dem Ausland sind mit höheren Kosten verbunden.

GB IE

Please contact the service centre first for any questions regarding the product or claims, preferably by e-mail.

e-mail: service@bresseruk.com
Telephone*: +44 1342 837 098

BRESSER UK Ltd
Unit 1 starborough Farm,
Starborough Road, Nr Marsh Green,
Edenbridge, Kent TN8 5RB
Great Britain

*Number charged at local rates in the UK (the amount you will be charged per phone call will depend on the tariff of your phone provider); calls from abroad will involve higher costs.

FR BE

Si vous avez des questions concernant ce produit ou en cas de réclamations, veuillez prendre contact avec notre centre de services (de préférence via e-mail).

e-mail: sav@bresser.fr
Téléphone*: 00 800 6343 7000

BRESSER France SARL
Pôle d'Activités de Nicopolis
260, rue des Romarins
83170 Brignoles
France

*Prix d'un appel local depuis la France ou Belgique

NL BE

Als u met betrekking tot het product vragen of eventuele klachten heeft kunt u contact opnemen met het service centrum (bij voorkeur per e-mail).

e-mail: info@folux.nl
Teléfono*: +31 528 23 24 76

Folux B.V.
Smirnoffstraat 8
7903 AX Hoogeveen
Nederlands

*Het telefoonnummer wordt in het Nederland tegen lokaal tarief in rekening gebracht. Het bedrag dat u per gesprek in rekening gebracht zal worden, is afhankelijk van het tarief van uw telefoon provider; gesprekken vanuit het buitenland zullen hogere kosten met zich meebrengen.

ES IT PT

Si desea formular alguna pregunta sobre el producto o alguna eventual reclamación, le rogamos que se ponga en contacto con el centro de servicio técnico (de preferencia por e-mail).

e-mail: servicio.iberia@bresser-iberia.es
Teléfono*: +34 91 67972 69

BRESSER Iberia SLU
c/Valdemorillo,1 Nave B
P.I. Ventorro del cano
28925 Alcorcón Madrid
España

*Número local de España (el importe de cada llamada telefónica dependen de las tarifas de los distribuidores); Las llamadas des del extranjero están ligadas a costes suplementarios.